




SCHEMATIC WIRING DIAGRAM



WIRING FOR INSTRUMENT PANEL SIDE (WHs PART NO. B024554)

WIRING FOR FRAME SIDE (WHs PART NO. B023986)

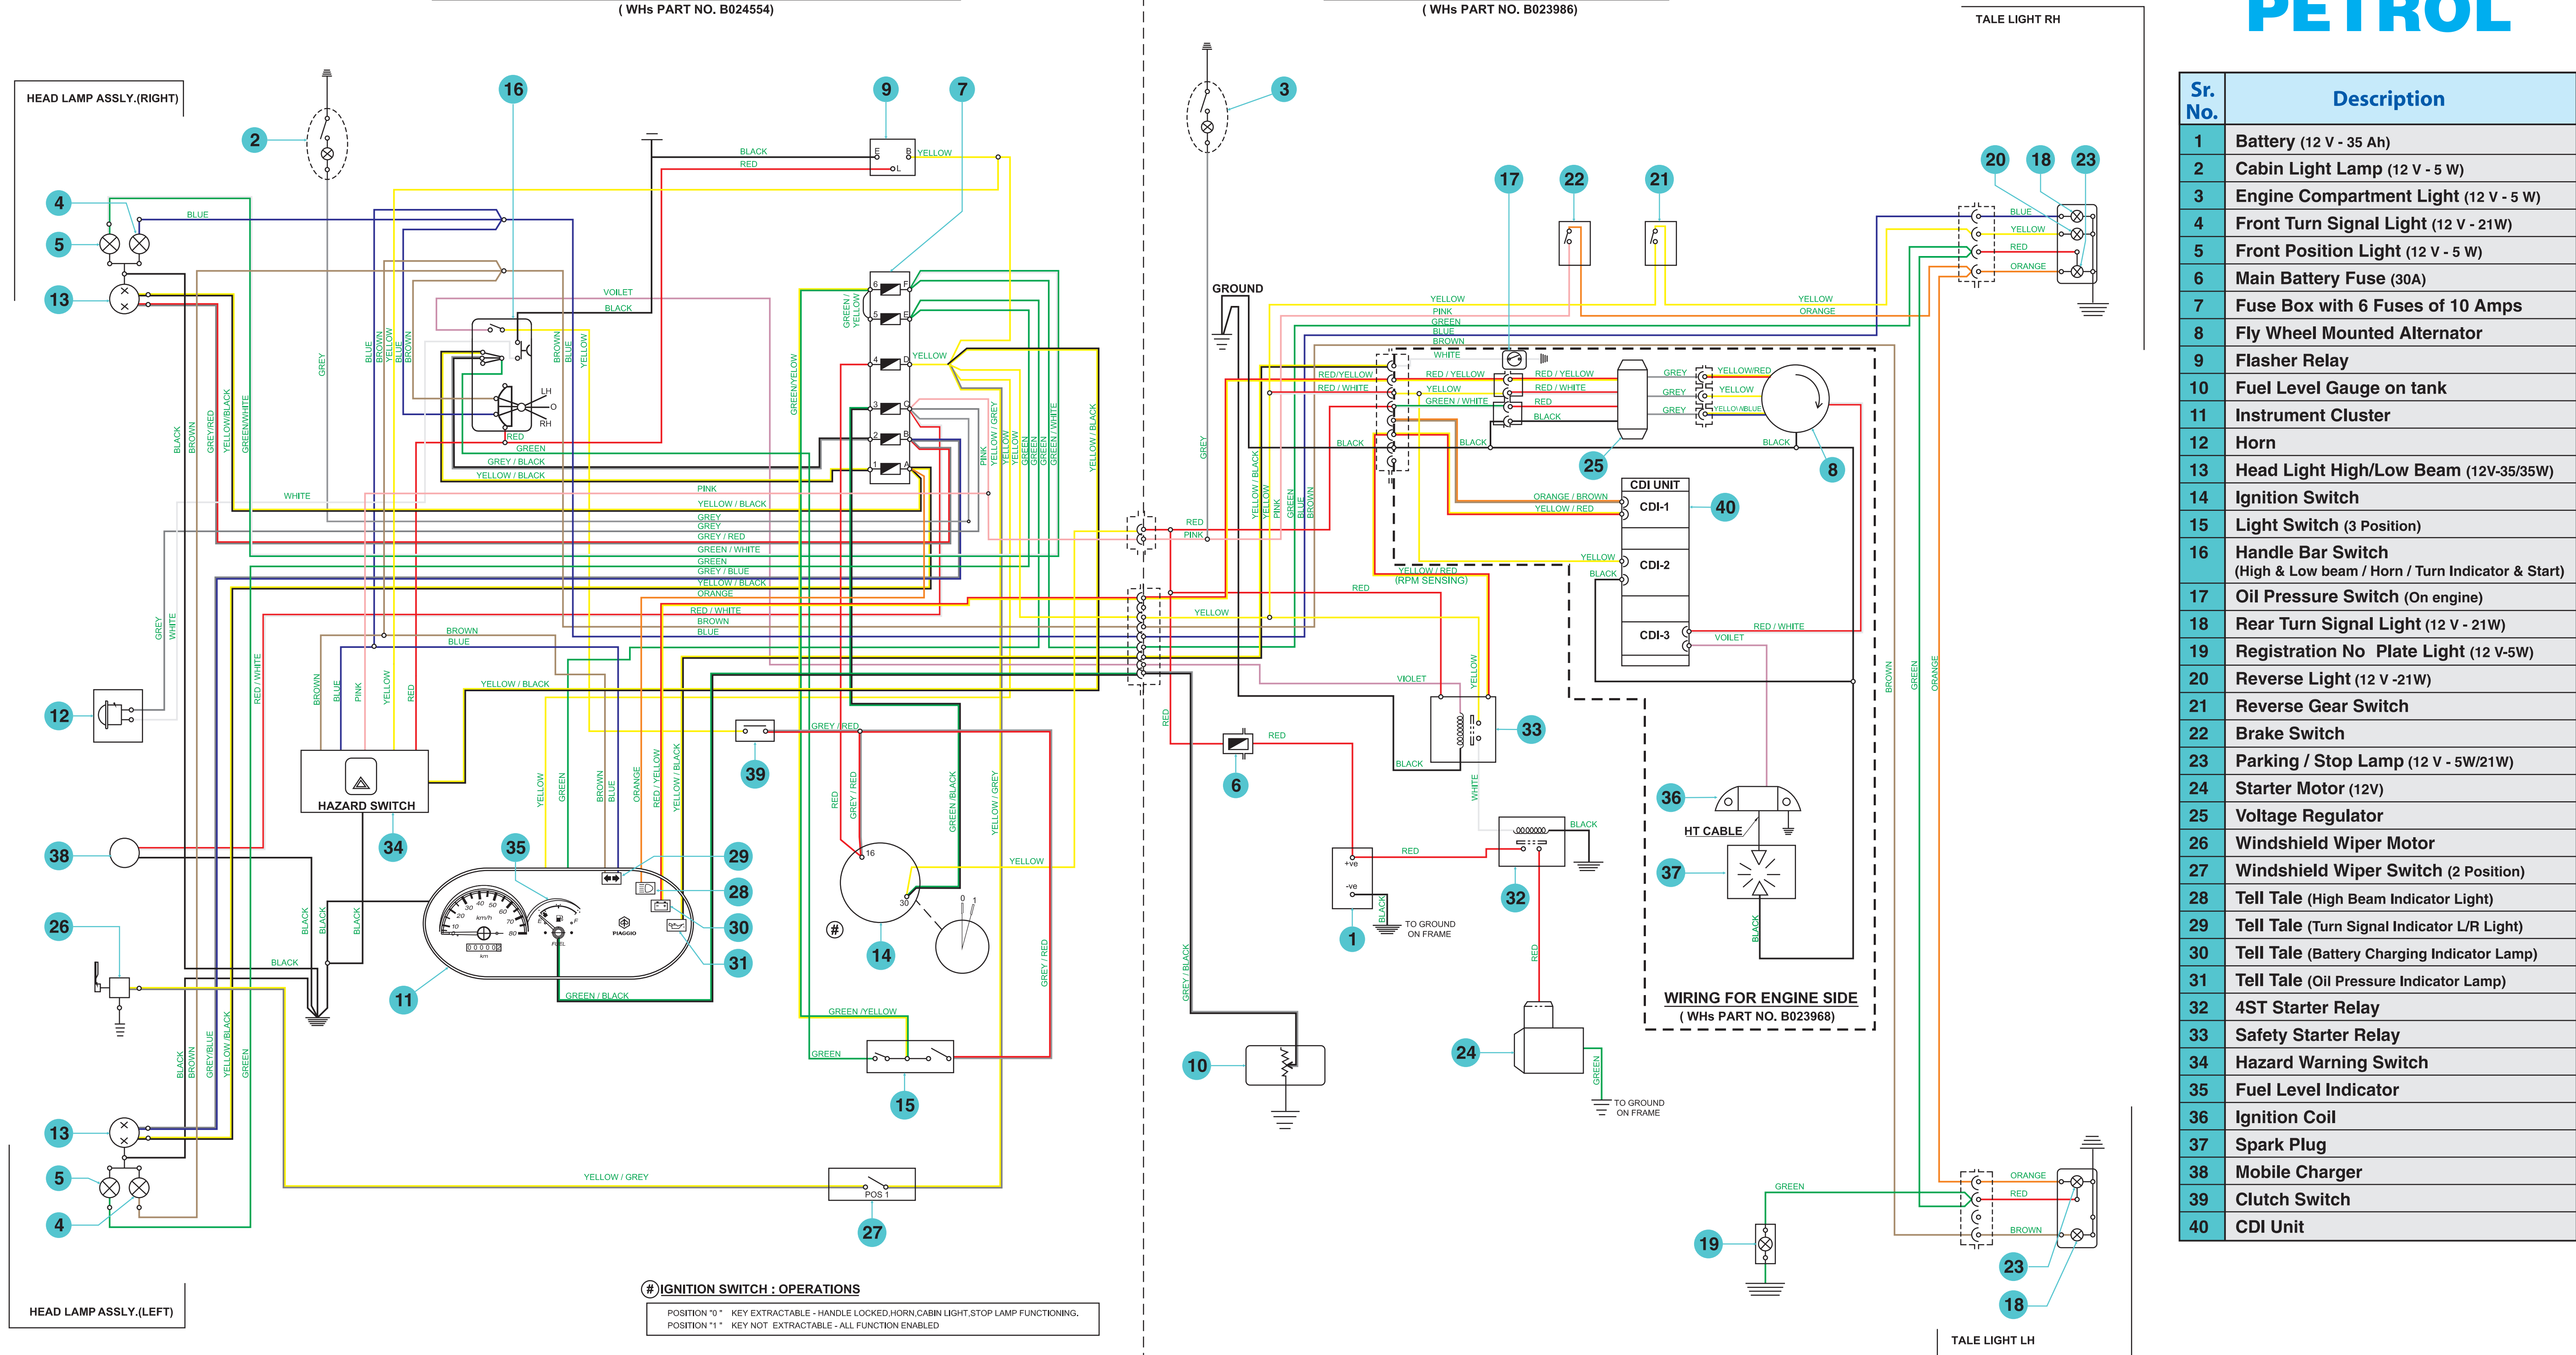

Sr. No.	Description
1	Battery (12 V - 35 Ah)
2	Cabin Light Lamp (12 V - 5 W)
3	Engine Compartment Light (12 V - 5 W)
4	Front Turn Signal Light (12 V - 21W)
5	Front Position Light (12 V - 5 W)
6	Main Battery Fuse (30A)
7	Fuse Box with 6 Fuses of 10 Amps
8	Fly Wheel Mounted Alternator
9	Flasher Relay
10	Fuel Level Gauge on tank
11	Instrument Cluster
12	Horn
13	Head Light High/Low Beam (12V-35/35W)
14	Ignition Switch
15	Light Switch (3 Position)
16	Handle Bar Switch (High & Low beam / Horn / Turn Indicator & Start)
17	Oil Pressure Switch (On engine)
18	Rear Turn Signal Light (12 V - 21W)
19	Registration No Plate Light (12 V-5W)
20	Reverse Light (12 V -21W)
21	Reverse Gear Switch
22	Brake Switch
23	Parking / Stop Lamp (12 V - 5W/21W)
24	Starter Motor (12V)
25	Voltage Regulator
26	Windshield Wiper Motor
27	Windshield Wiper Switch (2 Position)
28	Tell Tale (High Beam Indicator Light)
29	Tell Tale (Turn Signal Indicator L/R Light)
30	Tell Tale (Battery Charging Indicator Lamp)
31	Tell Tale (Oil Pressure Indicator Lamp)
32	4ST Starter Relay
33	Safety Starter Relay
34	Hazard Warning Switch
35	Fuel Level Indicator
36	Ignition Coil
37	Spark Plug
38	Mobile Charger
39	Clutch Switch
40	CDI Unit




SCHEMATIC WIRING DIAGRAM



WIRING FOR INSTRUMENT PANEL SIDE (WHs PART NO. B024555)

WIRING FOR FRAME SIDE (WHs PART NO. B024261)

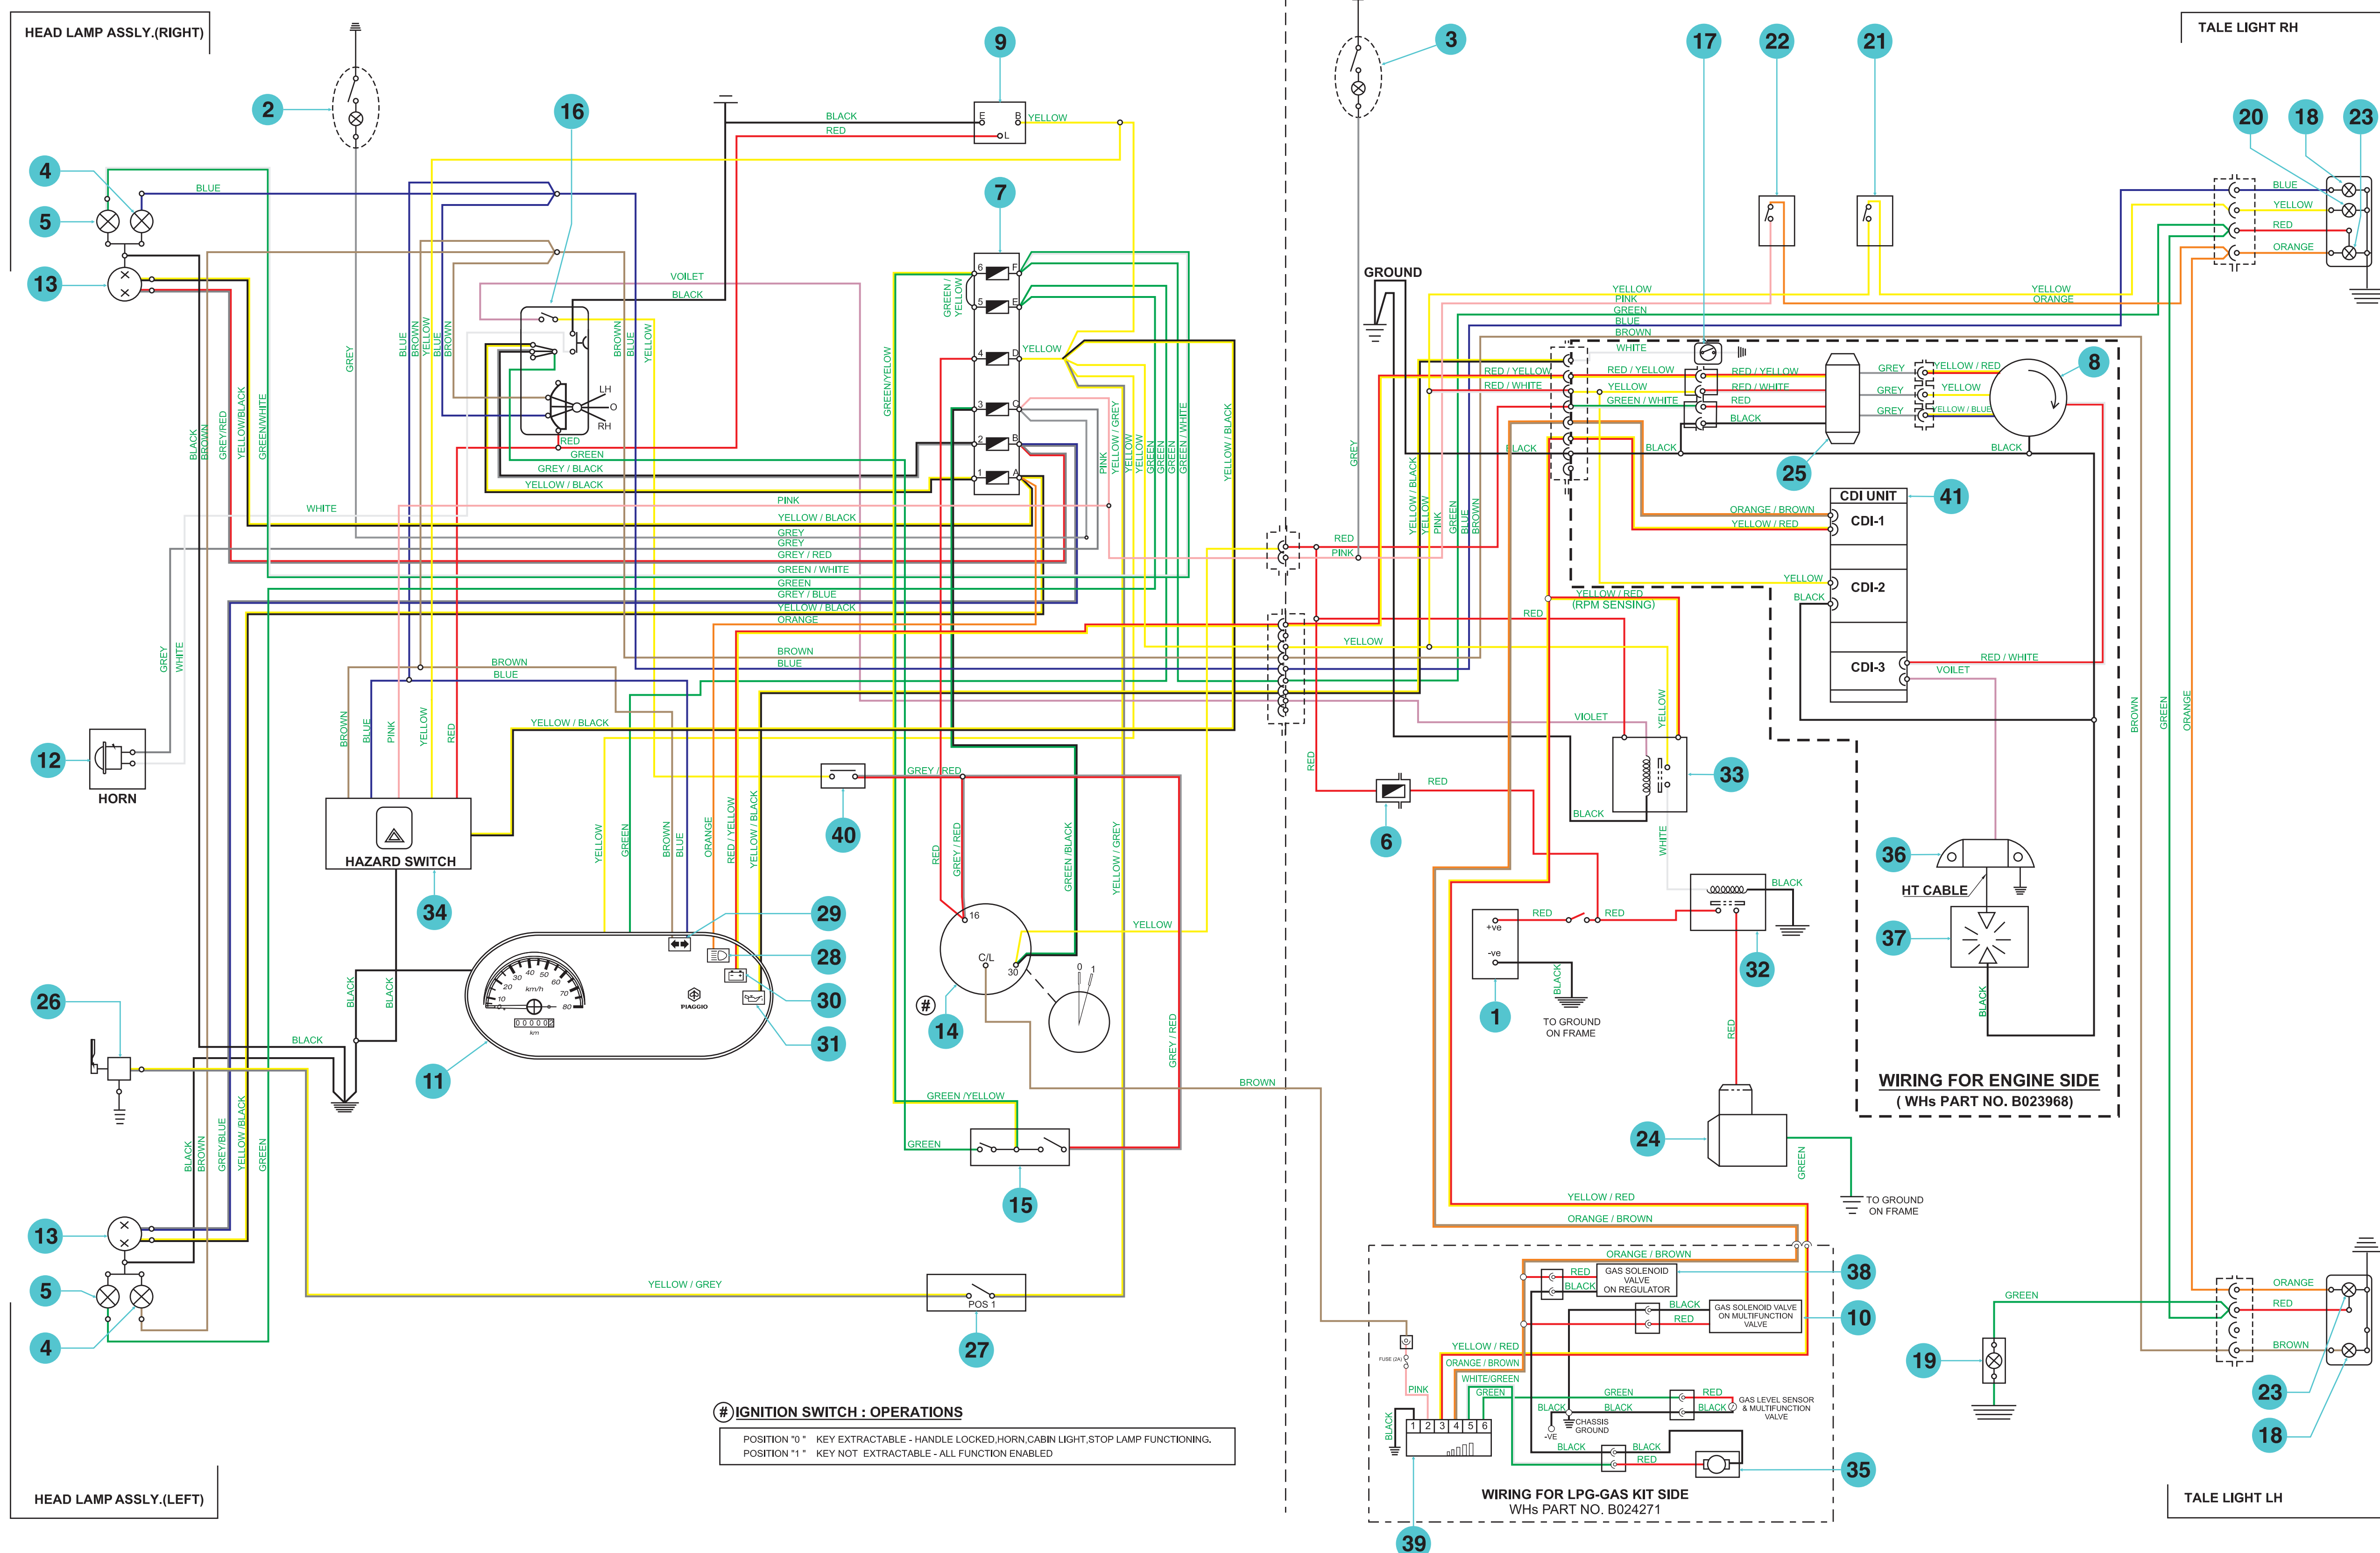

Sr. No.	Description
1	Battery (12V-35AH)
2	Cabin Light (12V-5W)
3	Engine Compartment Lamp (12V-5W)
4	Turn Indicator Lamp (12V-21W)
5	Position Lamp (12V-5W)
6	Main Battery Fuse (30A)
7	Fuse Box with 6 Fuses (10A)
8	Flywheel Mounted Alternator
9	Flasher Relay
10	Gas Solenoid on Multifunction Valve
11	Instrument Cluster
12	Horn
13	Head Lamp High/Low Beam (12V-35-35W)
14	Ignition Switch
15	Light Switch (3 Position)
16	Handle Bar Switch (High & Low beam / Horn / Turn Indicator & Start)
17	Oil Pressure Switch (On Engine)
18	Rear Turn Signal Light (12V-21W)
19	Registration No. Plate Light (12V-5W)
20	Reverse Lamp (12V-21W)
21	Reverse Gear Switch
22	Brake Switch
23	Parking/Stop Lamp (12V-5W/21W)
24	Starter Motor (12V)
25	Voltage Regulator
26	Windshield Wiper Motor
27	Windshield Wiper Switch (2 Position)
28	Tell Tale (High Beam Indicator Light)
29	Tell Tale (Turn Signal Indicator L/R Light)
30	Tell Tale (Battery Charging Indicator Lamp)
31	Tell Tale (Oil Pressure Indicator Lamp)
32	4ST Starter Relay
33	Starter Safety Relay
34	Hazard Warning Switch
35	Petrol Feed Pump Motor / Solenoid
36	Ignition Coil (On Engine)
37	Spark Plug (On Engine)
38	Gas Solenoid Valve on Regulator
39	Electronic Control Unit
40	Clutch Switch
41	CDI Unit



SCHEMATIC WIRING DIAGRAM



WIRING FOR INSTRUMENT PANEL SIDE (WHs PART NO. B024555)

WIRING FOR FRAME SIDE (WHs PART NO. B024259)

